

START UP

1. FOLLOW THE ON SCREEN INSTRUCTIONS TO LOG ON TO THE COMPUTER



If computer is off, turn on using the ON button (inside the lecturn).

Computer ON button

Computer Tower

2. TURN PROJECTOR ON

Press the POWER button on the projector remote control.




All devices are projected - no monitors

LECTURN


Document Camera:



Please don't touch other rack buttons

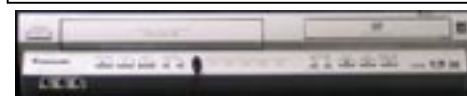

DVD / VCR

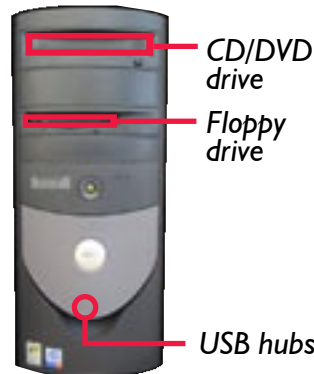

CD/DVD drive
Floppy drive

USB hubs

Computer

SWITCH DEVICES

DVD/VCR

Computer - Document Camera

Buttons on the projector remote control switch between projecting the DVD/VCR and the computer/document camera.

To select computer/document camera:

1. Press the Computer button on the projector remote control. You will see the Source Select menu.

2. Press the Select button on the projector remote control (also labelled "L").

To select DVD/VCR

1. Press the Video button on the projector remote control. You will see the Source Select menu.

2. Press the Select button on the projector remote control (also labelled "L").



ENDING CLASS

1. LOG OFF THE COMPUTER.
Please leave the computer ON!

2. TURN THE PROJECTOR OFF
Use the remote control (press power button second time to confirm off command!).

Need Help?!

Tech Solutions Center
Dial (776)-2168

Mon. to Thurs. 7:00 am - 10:00 pm

Friday 7:00 am - 9:00 pm

Saturday 8:00 am - 5:00 pm

DOCUMENT CAMERA DISPLAY

Make sure the document camera power is on (green button).

Double click the desktop icon called "SDP9xR.exe"



The display software will open. Click on the "Control" button to open the main control panel, which controls zoom, exposure, and other functions.

VOLUME

Volume control is on the projector's remote. Volume level is shown in the lower right of the display.

